



MANTICORE ARMS, INC.



TALON RMR RED DOT RING MOUNT INSTALLATION INSTRUCTIONS

Warning: Always verify your rifle is unloaded prior to installing any parts!

The Talon RMR Red Dot Ring Mount is compatible with the following rifles/scope mounts:


- Steyr AUG A3 or A3 M2 (A3 / A3 M2 Talon Mount)
- Steyr AUG A3 M1 (M1 Talon Mount)

The Talon RMR Red Dot Ring Mount is compatible with the following optics:

- Optics that mount on the RMR pattern mount, using 4-40 screws

The following is included in the kit:

- (1) RMR Mounting Plate
- (1) Talon Red Dot Ring Top (threaded for RMR base)
- (2) 6-32 x 5/16" screws
- (1) 5/64" allen wrench

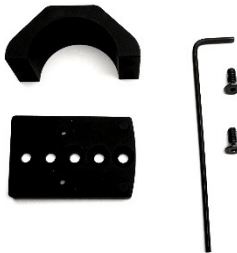

You will need the following tools:

- 7/64" allen wrench (included with your Talon Mount)
- Blue Loctite (optional)
- Allen wrench for 4-40 screws for your red dot
- (2) 4-40 screws if not already included with optic

STEP 1:

Remove the magazine from the rifle, pull back on the charging handle and ensure the chamber is clear of live ammunition. Let the charging handle go to the forward position and place the rifle on "SAFE"

STEP 2:

Remove either the front or rear top ring on your Talon Mount. Use a 7/64" allen wrench to remove the (4) 6-32 x 1/2" screws.

STEP 3:

Install the included Red Dot Ring Top (the one with extra screw holes on the top and angled sides). Use the 7/64" allen wrench to tighten the 6-32 bolts in a "star" pattern until snug, making sure to leave an even gap between the rings on the base on each side (approximately thin thickness of a playing card).


STEP 4:

The RMR Mounting Plate can be located on the top or on either 45 degree angled side of the Red Dot Ring. Choose the location that is preferable to you. The top is typically the "best" location, but either angled side may be used to avoid a scope turret getting in the way of the field of view.



STEP 5:

The RMR Mounting Plate also has four positions for mounting forward to rear. Choose the position that allows for the best clearance from the adjustment turrets, bell of the scope, or any other features of the scope. Use the 5/64" allen wrench to tighten down the (2) 6-32 screws. Make sure they are snug.

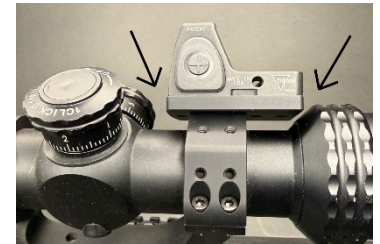

CAUTION:

Manticore Arms recommends AGAINST THE USE OF LOCTITE on the 6-32 screws that mount the RMR Mounting Plate, as if the screws get stuck it can make removing the scope ring difficult, and using heat on the screws to loosen the Loctite may lead to damage to the scope.

STEP 6:

Use the 4-40 screws and allen wrench to install you RMR base compatible optic. Zero your optic per the optic instructions.

YOUR TALON RMR RED DOT RING MOUNT IS NOW INSTALLED!

SCAN THE QR CODE TO VISIT OUR YOUTUBE CHANNEL WITH INSTRUCTIONS, ETC.



WWW.MANTICOREARMS.COM

Manticore Arms, Inc.

158 Daniels Creek Cir.
Goose Creek, SC 29445

Phone: 854-275-3977

Email: info@ManticoreArms.com

Revised: 06/01/2026

www.ManticoreArms.com

MANTICORE ARMS, INC.
Advanced Fighting Gear

SWITCHBACK CHARGING HANDLE INSTALLATION INSTRUCTIONS